


AUDIOVOX®

LCM580NAV

User Manual
Instrucciones de manejo

English

Español

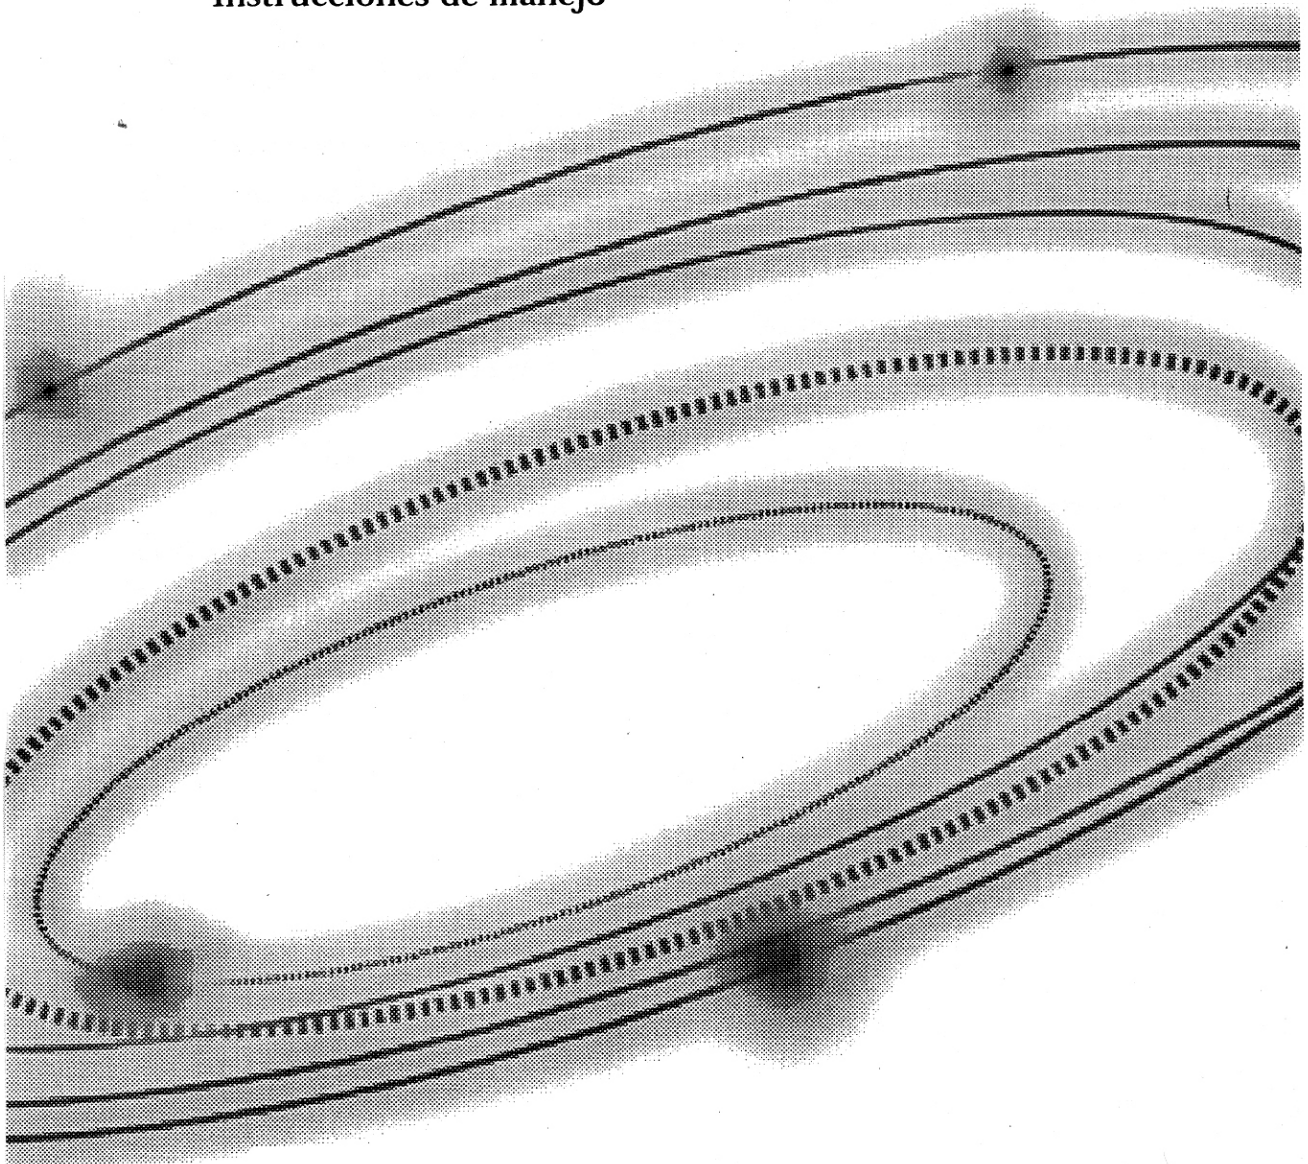

Setting monitor

The colour display is equipped with OSD prompting for the monitor settings.

Invoking OSD menu

— Briefly press the **MENU** button at the top of the monitor.

The OSD menu "Navigation Settings" is displayed.

In the OSD menu you can carry out the following settings:


- Volume: Volume level of the built-in monitor loudspeaker
- Brightness: Brightness of the display
- DisplayMode: Screen display; the selected setting is indicated with a yellow bar. Possible selections include:
 "Full Screen" (16:9)
 "Normal" (4:3)

Adjusting settings

— Press the **MENU** button until the desired menu item appears.

— Carry out the desired setting with the **+** or **-** buttons.

If necessary, invoke the next menu item by pressing the **MENU** button and carry out the settings.

 If you use the built-in monitor loudspeaker leave the volume level in the OSD menu on the middle setting. Adjust the volume level for the audible messages of the navigation system only with the **+** or **-** buttons on the remote control.

 The volume level of the built-in monitor loudspeaker can also be set without invoking the OSD menu. To do so:


— Press **+** or **-** button on the monitor.

The display automatically changes to the menu for setting the volume level.

— Set the volume as required.

Quitting OSD menu


To quit the OSD menu press the **MENU** button until the menu is hidden.

 If a button has not been pressed for several seconds, then the OSD menu is automatically hidden again.

Settings in Setup menu

In addition, the monitor offers you the possibility of performing the following settings in the Setup menu:

- **Bright.Contr.: Auto/Auto off:**
Automatic brightness control On/Off. With "Auto" the display brightness is automatically adapted to the ambient lighting.
- **Mount.Pos.: high/low:**
Adaptation of the display brightness to the mounting position high/low
- **Loudspeaker: On/Off:**
Built-in loudspeaker On/Off.

 If the loudspeaker is switched off, then it will automatically be switched on again as soon as you adjust the monitor volume.

Invoking/quitting Setup menu


— Press all three buttons at the top of the monitor at the same time.

The Setup menu appears.

— Briefly press the **MENU** button until the desired setting is activated.

— Set the volume as required.

— To quit the Setup menu press the **MENU** button until the menu is hidden.

 If a button has not been pressed for several seconds, then the OSD menu is automatically hidden again.

Automatic brightness control

If the automatic brightness control ("Bright.Contr.") in the Setup menu is set to "Auto", then the brightness of the display is automatically adjusted to the ambient light conditions.

With the "Brightness" option in the OSD menu you can adjust the maximum and minimum brightness of the display. Note that for daylight the maximum brightness ("Brightness Day") and for darkness the minimum brightness ("Brightness Night") should be set.

The brightness is then adjusted between these two limits according to the ambient lighting.

If the automatic brightness control is switched off, then the display shows "Brightness Auto OFF" in the OSD menu.

Ajuste del monitor

El display en color está equipado con una guía de usuario OSD para los ajustes del monitor.

Acceder al menú OSD

- Pulse brevemente la tecla **MENU** en la parte superior del monitor. Aparecerá el menú OSD "Navigation Settings".


En el menú OSD es posible llevar a cabo los siguientes ajustes:


- Volume: Volumen del altavoz integrado en el monitor
- Brightness: Brillo de la pantalla
- DisplayMode: Modo de visualización; el ajuste seleccionado se muestra con una barra amarilla. Puede elegirse entre:
"Full Screen" (16:9)
"Normal" (4:3)

Realizar los ajustes

- Pulsar la tecla **MENU** tantas veces hasta que aparezca el punto de menú deseado.
- Realizar el ajuste con las teclas **+** o **-**.

En caso necesario, pasar al siguiente punto de menú pulsando la tecla **MENU** y realizar el ajuste correspondiente.

 Si utiliza el altavoz integrado en el monitor, deje el ajuste de volumen del menú OSD en la posición intermedia. Regule el volumen de los mensajes acústicos del sistema de navegación únicamente con las teclas **+** o **-** del mando a distancia.

 El volumen del altavoz integrado en el monitor también puede ajustarse sin acceder al menú OSD. Para ello:


- Pulse la tecla **+** o **-** del monitor.

En la pantalla aparecerá automáticamente el menú de ajuste de volumen.

- Llevar a cabo el ajuste deseado.

Salir del menú OSD

Para salir del menú OSD, pulse brevemente la tecla **MENU** tantas veces hasta que desaparezca el menú.

 Si pasan algunos segundos sin accionar ninguna de las teclas, desaparecerá automáticamente el menú OSD.

Ajustes en el menú Setup

Además, el monitor le permite llevar a cabo los siguientes ajustes en el menú Setup:

- **Bright.Contr.: Auto/Auto off:**
Activar / desactivar la regulación automática de brillo. Con "Auto", el brillo del display se adapta automáticamente a la luz del entorno.
- **Mount.Pos.: high/low:**
Adaptar el brillo del display a la posición de montaje alta / baja
- **Loudspeaker: On/Off:**
Conectar / desconectar el altavoz integrado.

 Si el altavoz está apagado y Ud. empieza a ajustar el volumen en el monitor, el altavoz se volverá a conectar automáticamente.

Entrar / salir del menú Setup


— Pulsar simultáneamente las tres teclas que se encuentran en la parte superior del monitor.

Aparecerá el menú Setup.

— Pulsar brevemente la tecla **MENU** tantas veces hasta que se active el ajuste deseado.

— Llevar a cabo el ajuste deseado.

— Para salir del menú Setup, pulse brevemente la tecla **MENU** tantas veces hasta que desaparezca el menú.

 Si pasan algunos segundos sin accionar ninguna de las teclas, desaparecerá automáticamente el menú OSD.

Regulación automática del brillo

Si la regulación automática de brillo "Bright.Contr." del menú Setup está ajustada en "Auto", el brillo del display es adaptado automáticamente a la claridad del entorno.

En el menú OSD "Brightness" es posible ajustar el máximo y el mínimo brillo del display. Para ello es preciso ajustar el máximo brillo durante el día ("Brightness Day") y el mínimo brillo durante la noche ("Brightness Night").

Posteriormente, el brillo se regula entre esas dos posiciones dependiendo de la luz del entorno.

Si la regulación automática del brillo está desconectada al ajustar el brillo, se visualizará "Brightness Auto OFF" en el menú OSD.